

Maintenance Sub-Symbols

Main Item A / 0

Replace engine oil and filter.

Main Item B

Replace engine oil and filter.  
Service front and rear brakes.  
Check parking brake adjustments.  
Inspect tie rod ends, steering gear box and boots.  
Inspect suspension components.  
Inspect driveshaft boots.  
Inspect brake hoses and lines (including ABS).  
Check all fluid levels and condition of fluids.  
Inspect exhaust system.  
Inspect fuel lines and connections.

Sub-Item 1 - Expect every 8 - 19K △

Rotate tires, inspect for wear and adjust pressure.

Sub-Item 2 - Expect every 40 - 49K \*△

Replace air cleaner element.  
Replace dust and pollen filter.  
Inspect and adjust drive belt.

Sub-Item 3 - Automatic Transmission/  
Continuously Variable Transmission△

Replace automatic transmission fluid.  
Replace transfer case fluid (4WD Trucks).

Sub-Item 3 - Manual Transmission -  
Expect every 95 - 109K △

Replace manual transmission fluid.

Sub-Item 4 - Expect every 160 - 169K △

Replace spark plugs.  
Replace timing belt and inspect water pump (V6 only).  
Inspect valve clearance.

Sub-Item 5 - Expect first 175 - 184K  
and subsequent 80K △

Replace engine coolant.

Sub-Item 6 - Expect first 15 - 24K  
and subsequent 50K △

Replace rear differential fluid (4WD/AWD Trucks, S2000).

Sub-Item 7 - Every 3 years △

Replace brake fluid.

Sub-Item 8 - Expect every 48K △

Replace air cleaner element.

Sub-Item 9 - Expect every 16 - 19K △

Service front and rear brakes.  
Check parking brake adjustments.  
Inspect tie rod ends, steering gear box, and boots.  
Inspect suspension components.  
Inspect driveshaft boots.  
Inspect brake hoses ad lines (including ABS/VSA)  
Check all fluid levels and conditions of fluids.  
Inspect exhaust system.  
Inspect fuel lines and connections.

		0-10K	10-20K	20-30K	30-40K	40-50K	50-60K	60-70K	70-80K	80-90K	90-100K	100-110K	110-120K	120-130K	130-140K	140-150K	150-160K	160-170K	170-180K	180-190K	190-200K
Main Items	A/0/B																				
Sub Items	1	Rotate Tires	See sub-item 1 above																		
	2	Filters / adjust drive belt																			
	3 (auto)	ATF/CVT Fluid																			
	3 (manual)	MTF																			
	4	Spark plugs / timing belt (V6)																			
	5	Engine Coolant																			
	6	Differential Fluid																			
	7	Brake Fluid	Every 3 years																		
	8	Air Cleaner Element																			
	9	Brake Service & Chassis Inspection																			



The alpha character "A/B/0" indicates that the following maintenance needs to be performed:  
"A/0" Replace engine oil and filter.  
The numeric references "1" and "3" indicate that, in addition to the "A" service, you also require the following maintenance services:  
"1" Rotate tires. Inspect for wear and adjust pressure.  
"3" Replace automatic transmission fluid.



Example based on latest Honda dashboard.

NOTES  
\* See owner's manual for model specific information.  
• Replace brake fluid every 3 years.  
• Honda requires oil change every 12 months at a minimum.

△ Guide based on normal driving. Intervals may vary based on your driving habits or environment. See service advisor for full details.  
\* Exclude the Air Cleaner Element for models that have Sub-Item 8 (i.e. Clarity).